



High Flow Filtration Technology Available as a Rental Skid: Simplex 19 Element Filter Skid (Skid can be converted to a liquid/liquid coalescer)

Description

For more than 70 years Pall Corporation has been solving complex contamination problems across the refining, petrochemical and oil and gas industries. **By applying our advanced filtration and separation technologies** directly to the problem, we're able to help operators reduce maintenance costs and minimize unscheduled shutdowns. Our High Flow filtration platforms are proven to **efficiently and reliably filter contaminants from a wide variety of process and product streams**, which can cause a multitude of costly operational and fluid quality problems.

Features

- Maximum hydraulic flow capacity of 2158 m³/hr (9500 USGPM) (325,000 bbl/day)
- Fully valved and piped on skid (inlet/outlet, clean and dirty side vents and drains)
- Inlet/outlet connections on both sides of skid to allow field piping options. Optional outlet on top of vessel.
- Spare ports for vessel flushing and PSV connections
- Local differential pressure gauge
- Davited full-open closure
- Integrated, valved fluid sampling panel for influent and effluent samples
- Complies with most refinery mechanical specifications
- NACE compliant for sour service
- Lifting points at four corners of the skid
- Fork lift pockets for portability
- The frame on all skids is totally boxed in on all sides and bottom to provide spill containment



19-Around Simplex High Flow filter rental skid (side view)¹

Design Specifications²

- Mobile skid dimensions (L x W x H): 7.08 m (279 in) x 2.11 m (83 in) x 2.23 m (87.7 in)
Can be shipped via standard flatbed truck.
- Skid Weight: Dry – 6,956 kg (15,335 lbs),
Full of water – 9,457 kg (20,850 lbs)
- Vessel design: ASME Code, Section VIII, Div. 1 with CRN for Canada; 31 bar (450 psig) and FV @ 149°C (300°F)
- National Board Number
- Piping design: ASME B31.3 Process Piping Code for 31.03 bar (450 psig) @ 149°C (300°F)
- MDMT -40 F
- Filter vessel: one each, Pall Ultipleat[®] High Flow. Accepts 19, 15.24 cm (6 in) diameter x 152.4 cm (60 in) elements per vessel
- Inlet/outlet: 25.4 cm (10 in), 136.08 kg (300 lbs), equipped with full port gate valves

¹ Pictures shown are for illustrative purposes only. Actual product may vary due to product enhancement.

² For complete details, request a design package.

Materials of Construction

- Skid base: carbon steel (hot dip galvanized)
- Filter vessels and piping: carbon steel, primed and epoxy coated
- Inlet/outlet valves: 300 lb, OS&Y, 316 stainless steel flexible wedge, full-port gate style
- Housing closure gaskets: 304 SS inner ring and CS outer ring/Grafoil³

Applications

- Remove particulate contamination from:
 - feedstocks to protect catalytic reactor beds
 - LPG, gasoline, diesel, and jet fuel final products
 - many other contaminated products that can be found in a variety of storage tanks in a plant
 - amine (rich and lean)
 - aromatic extraction solvents
 - dehydration solvents
 - sour water
 - make-up water
- Prefiltration for liquid/liquid separations

³ Grafoil is a registered trademark of Graftech International




19-Around Simplex High Flow filter rental skid (closure view)¹



60 in Ultipleat High Flow filter element

Protect. Renew. Optimize.

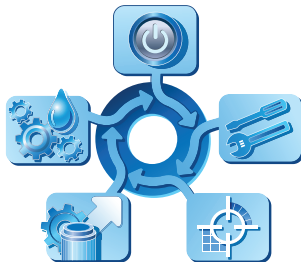

For immediate assistance, please contact
NAfleetmanager@pall.com



Pall Corporation

Fuels and Chemicals

25 Harbor Park Drive
Port Washington, NY 11050
+1 516 484 3600 telephone
+1 888 873 7255 toll free US



Pall Canada

+1 905 542 0330 telephone
+1 905 542 0331 fax

Visit us on the Web at www.pall.com

Pall Corporation has offices and plants throughout the world. For Pall representatives in your area, please go to www.pall.com/contact.

Because of technological developments related to the products, systems, and/or services described herein, the data and procedures are subject to change without notice. Please consult your Pall representative or visit www.pall.com to verify that this information remains valid. Products in this document may be covered by one or more patent numbers. For a complete list of Pall's patents, please visit www.pall.com/main/about-pall/patents.page

© Copyright 2016, Pall Corporation. Pall, , and Ultipleat are trademarks of Pall Corporation.  indicates a trademark registered in the USA. **Filtration. Separation. Solution.SM** is a service mark of Pall Corporation.